


Appendix: Optional Gutter Installation / DryJoist Pocket Install Guide

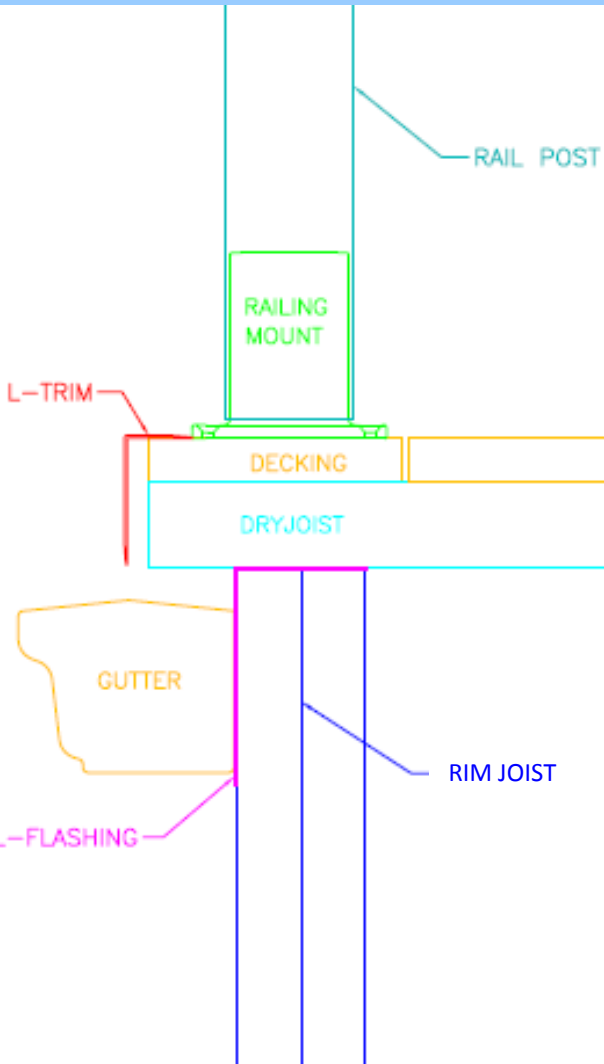

Since DryJoist is designed to divert water away from the house using channels running perpendicular to the house, the gutter will be installed on the Header Joist running parallel to the house. Use a section of aluminum or plastic L-Flashing long enough to cover the entire length of the Header Joist; install in-between the DryJoist and the Header Joist.

When installing the DryJoist system, you should leave approximately a 2" overhang beyond the Header Joist running parallel to the house. This overhang allows for the water running through the system to easily fall into an installed gutter.



Optional Gutter Install – Part 1

Install the Profile Trim to the outer edge of the deck that is opposite to the structure (drainage side).

You'll need to leave a ½" gap between the edge of the DryJoists and the Profile Trim; this allows water to easily flow into the gutter while concealing DryJoist's profile view.

The Profile Trim can be installed either on-top or below the decking planks.

Apply a bead of silicone caulk where the L-Flashing meets the DryJoist system.

Part 2

Install a conventional gutter to the rim joist below the DryJoist system. Follow the installation guidelines that are recommended by the gutter manufacturer.

**You may use a gutter guard top if you wish.*